




VINCI TOOP



GRUPO
LAMIARTE
INSPIRING LIFE

Módulo **Fregadero** 2 puertas

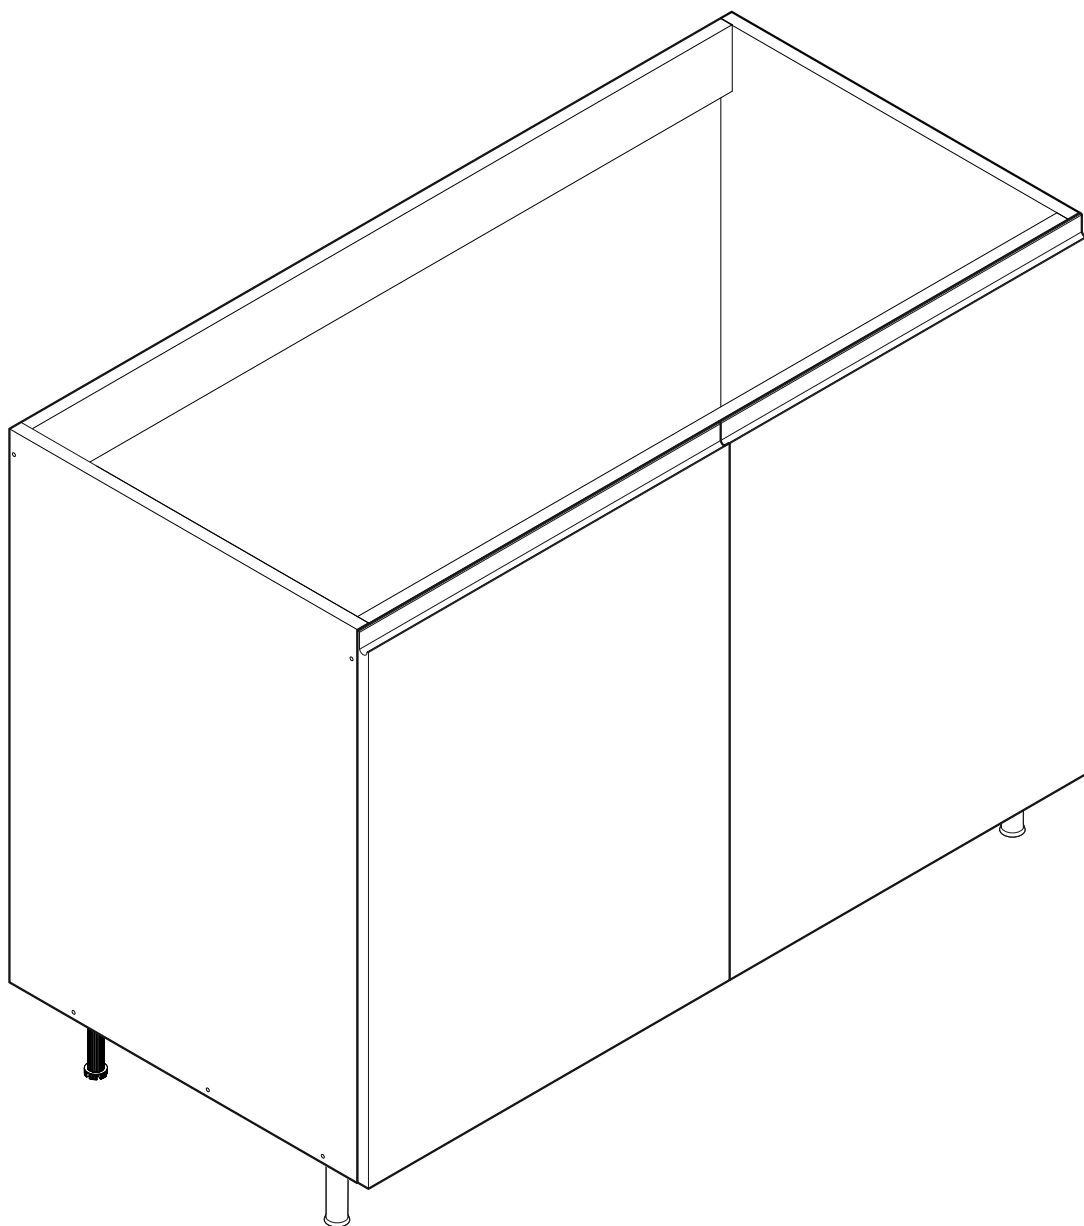

ES Manual de Instrucciones



EN Instructions Manual





FR Manuel d'Instructions




PT Manual de Instruções



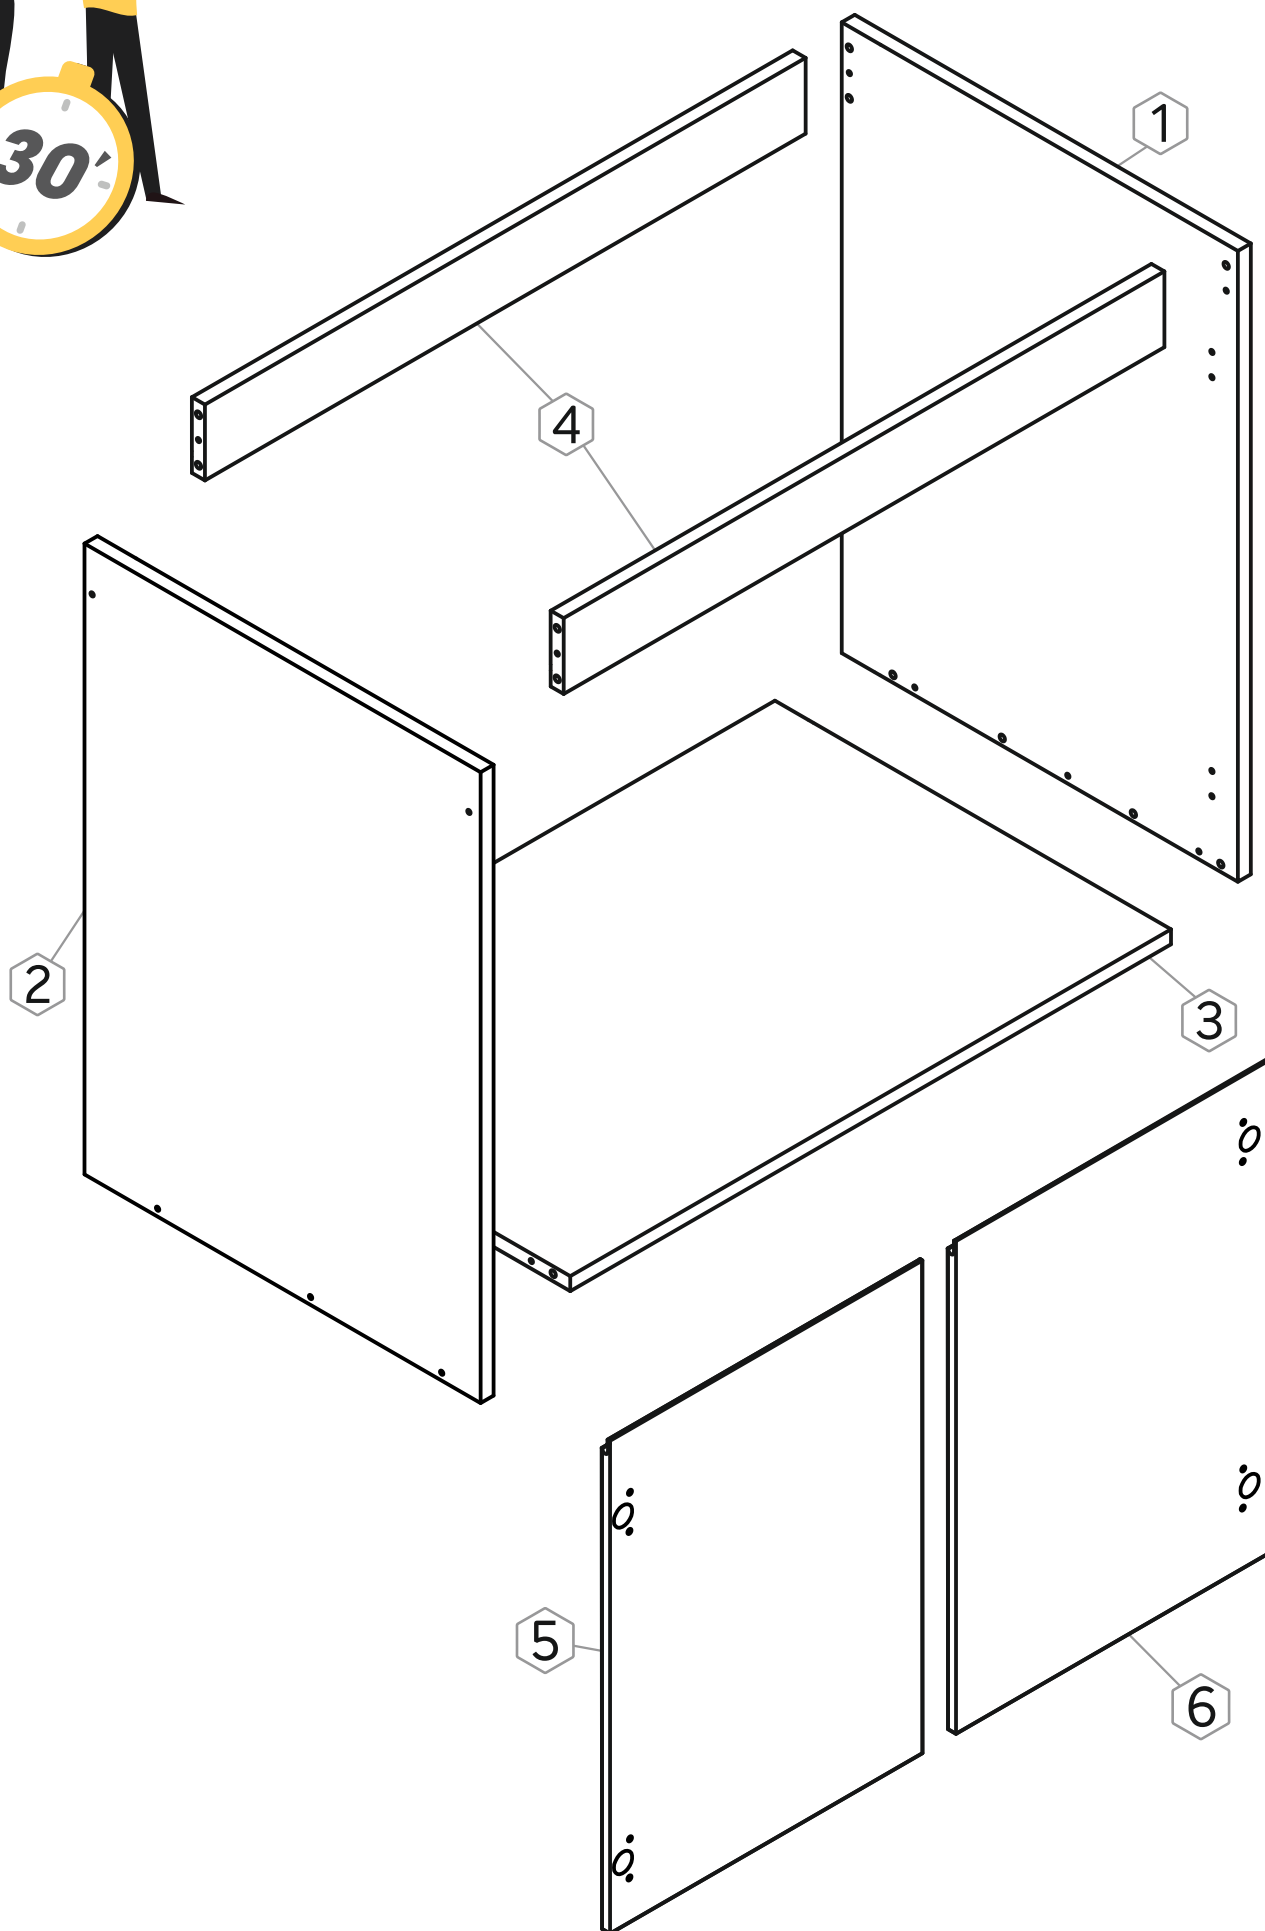


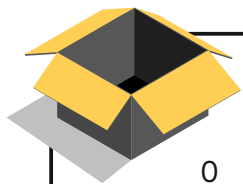


0 1 2 3 4 5 cm




H3
x8



A
x14



C
x10



O
x10

Pegatinas Ø13mm
Sticker Ø13mm
Autocollant Ø13mm
Autocolantes Ø13mm




P1
x2

Pata regulable
Adjustable leg
Pied réglable
Perna ajustável



P2
x2

Pata regulable decorativa
Decorative adjustable leg
Pied décoratif réglable
Perna ajustável decorativa



E
x4

Lágrimas
Tears
Larmes
Lágrimas









M1
x4

Bisagra recta
Straight hinge
Charnière droite
Dobradiça reta







M2
x4


Base Bisagra
Hinge base
Base de charnière
Base da dobradiça

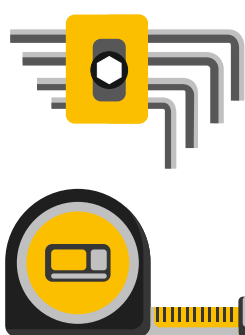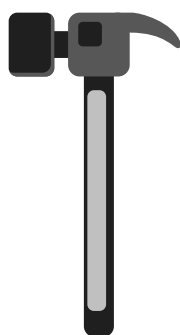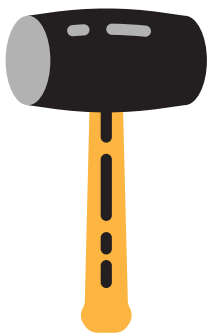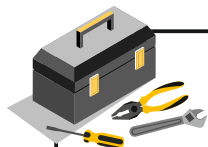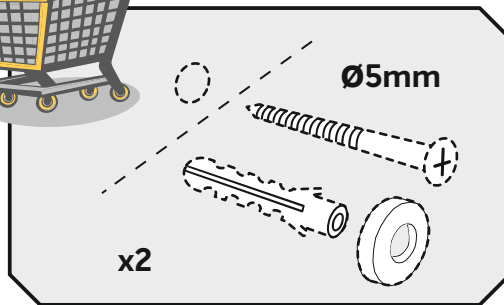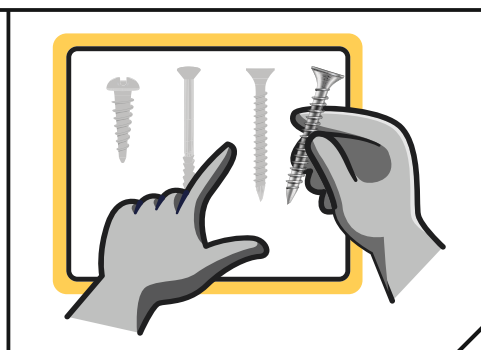


1

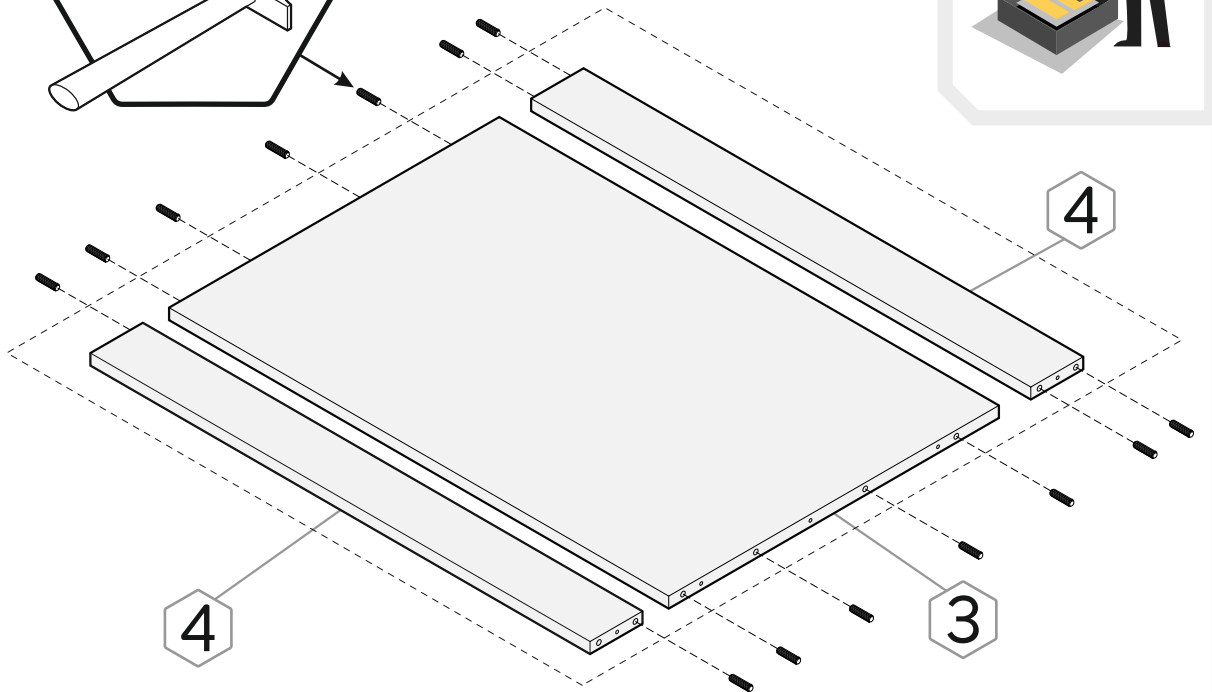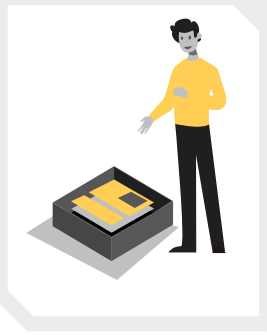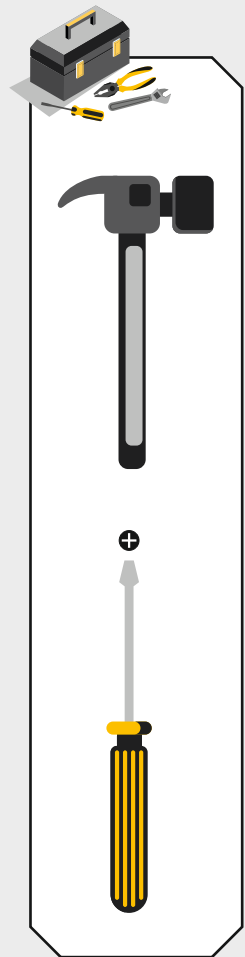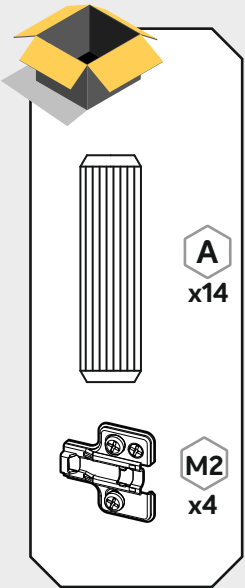


2

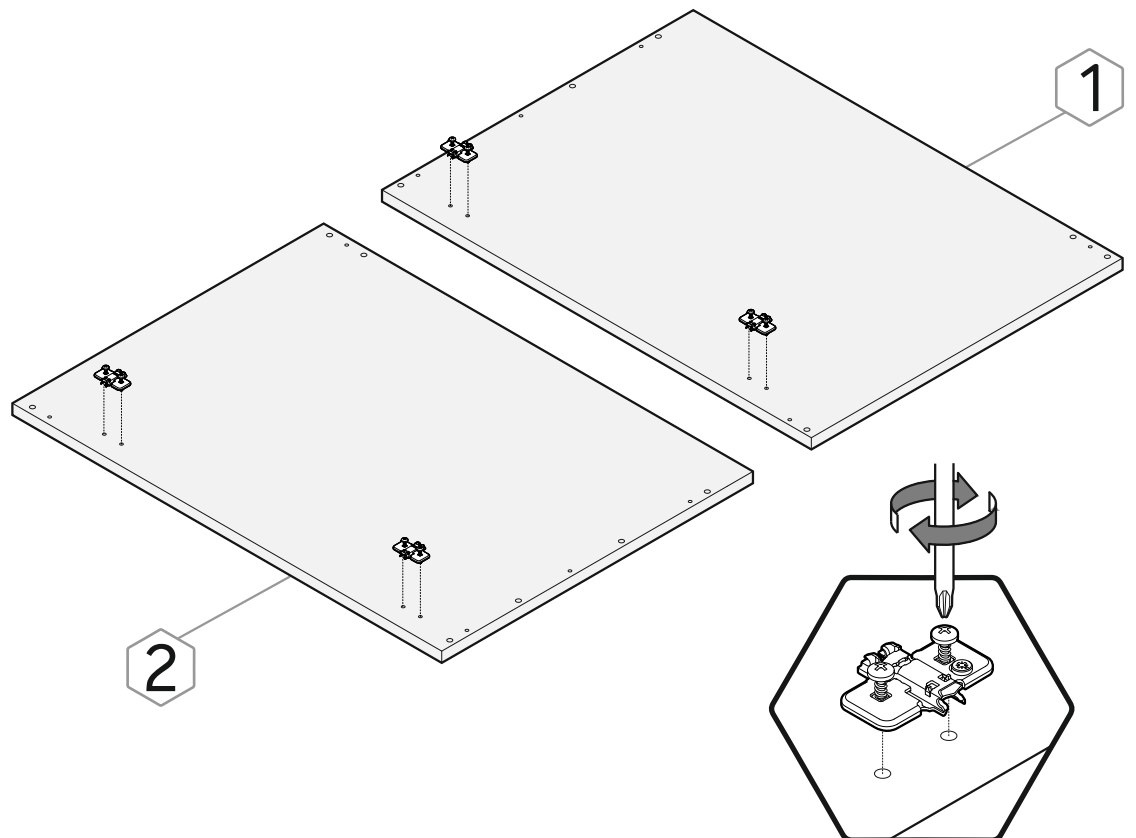

3




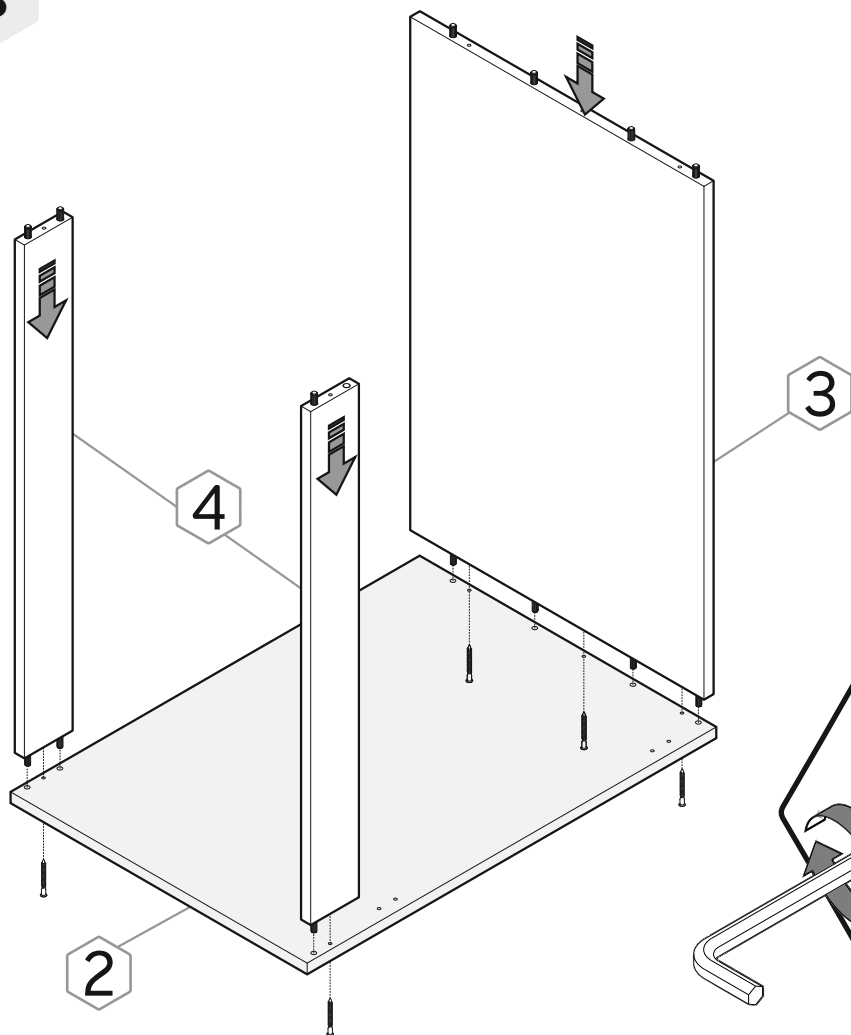


4

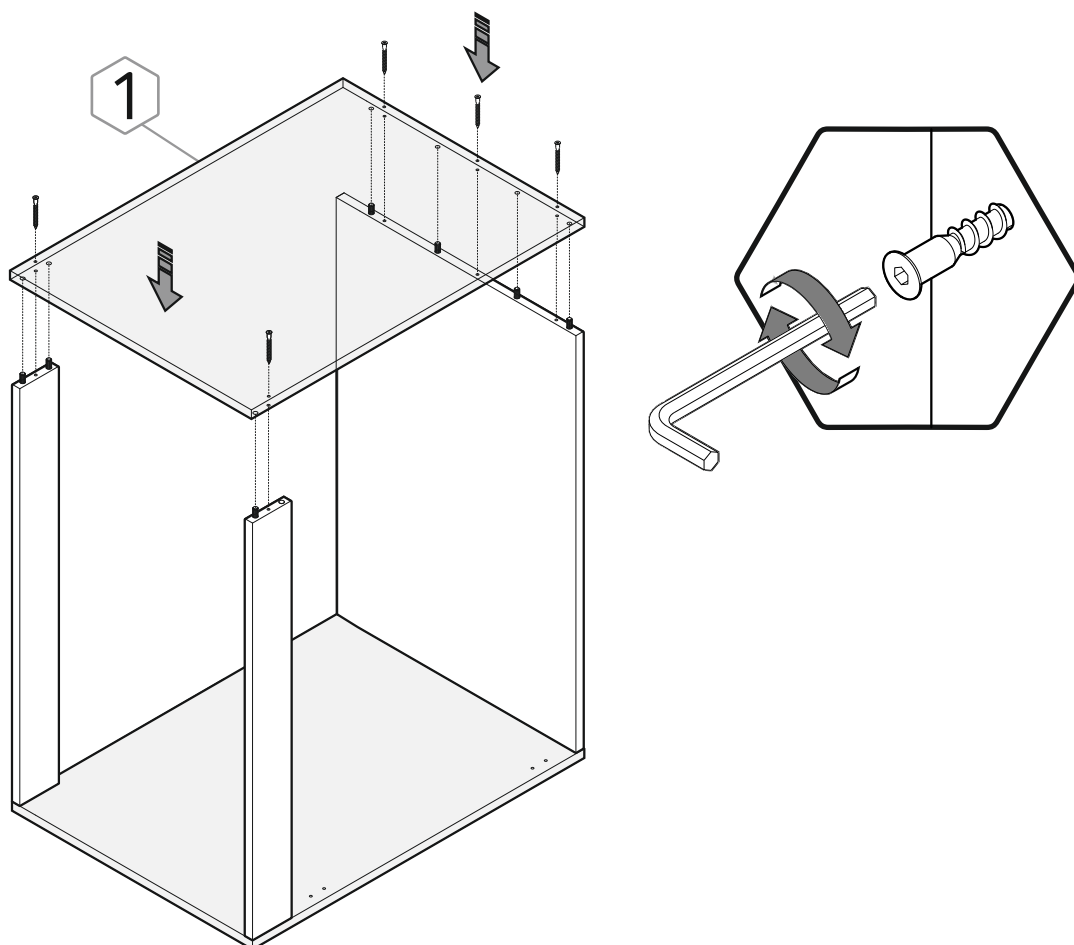







5

i

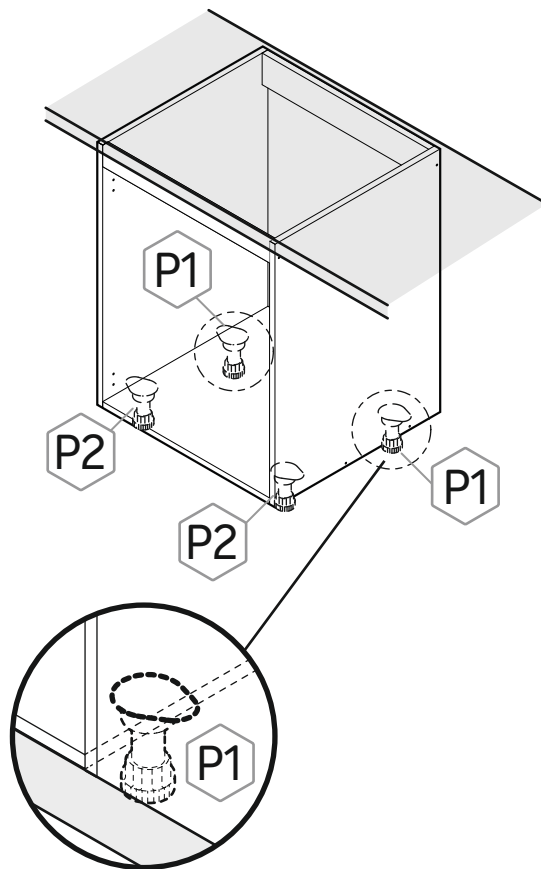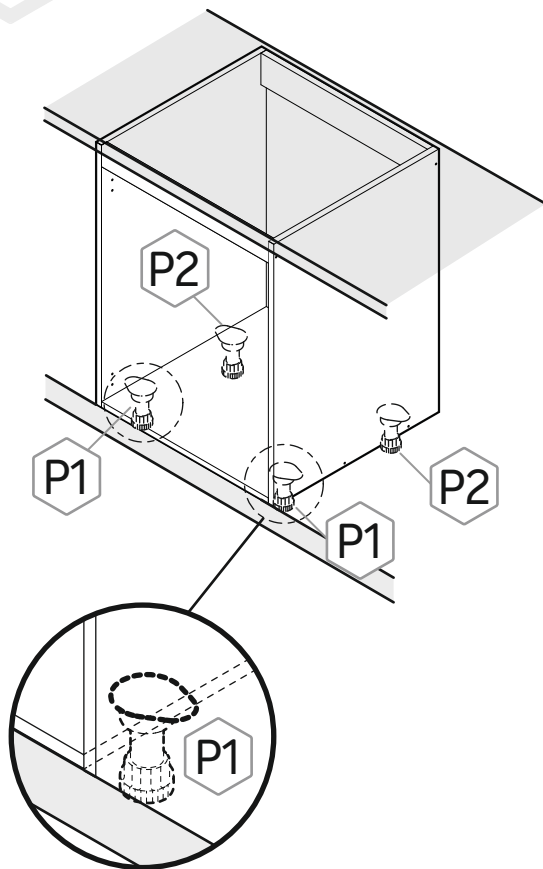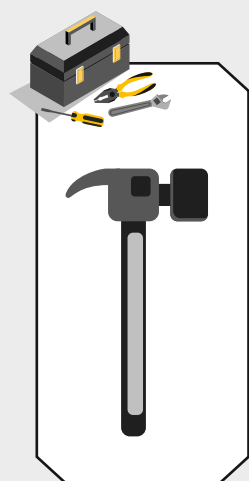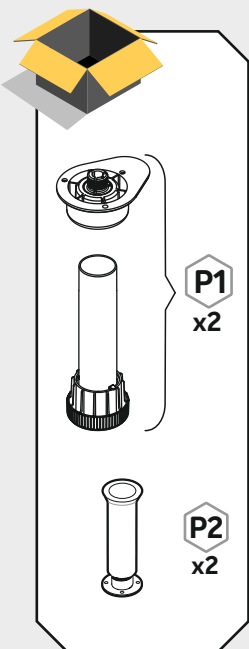





5 Nota/Note/Mot/Nota:

Montaje de pata "P1" / Mounting leg "P1" / Pied de montage «P1» / Perna de montagem "P1"

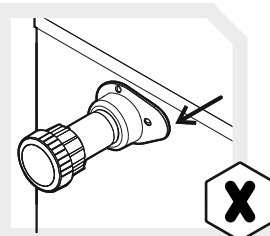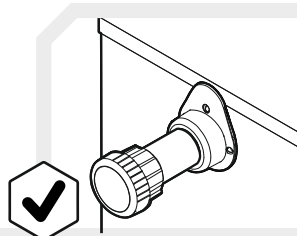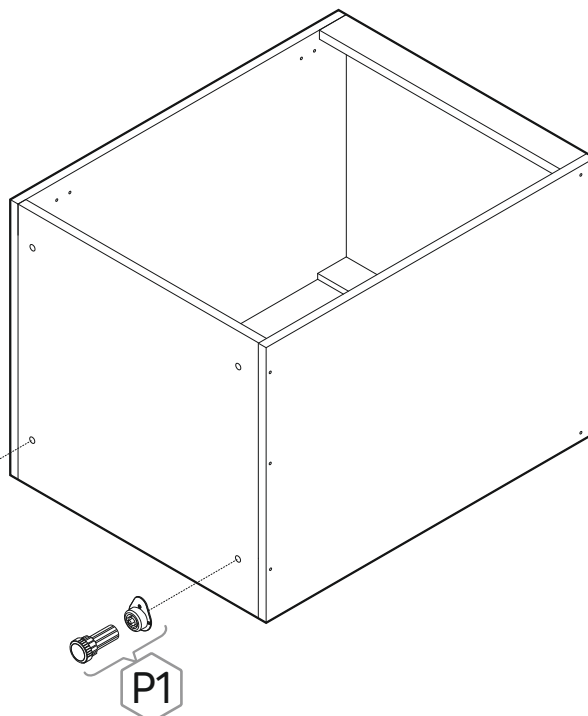
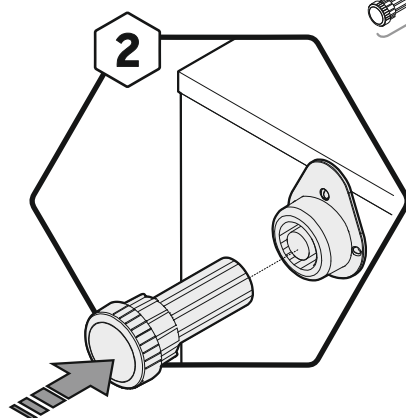
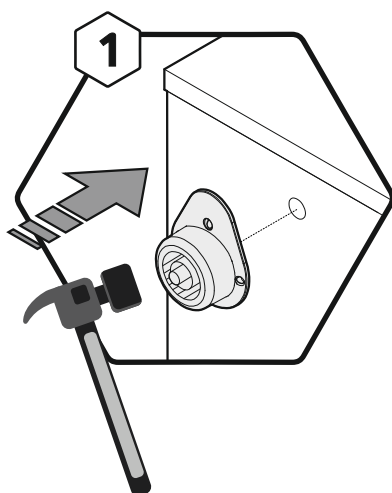


6 Nota/Note/Mot/Nota:

Montaje de pata "P2" / Mounting leg "P2" / Pied de montage «P2» / Perna de montagem "P2"

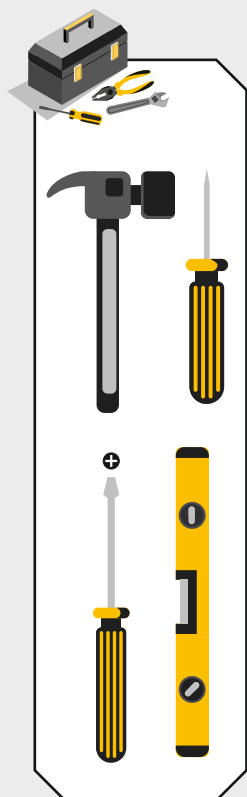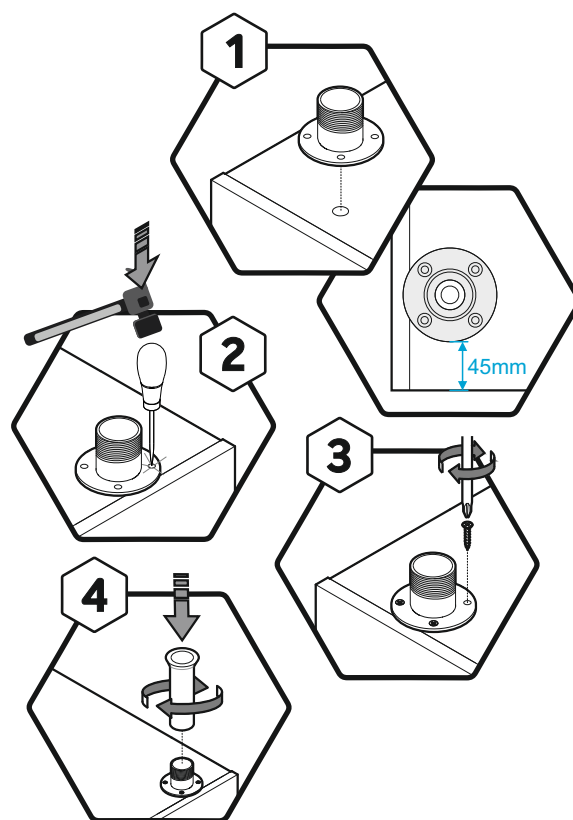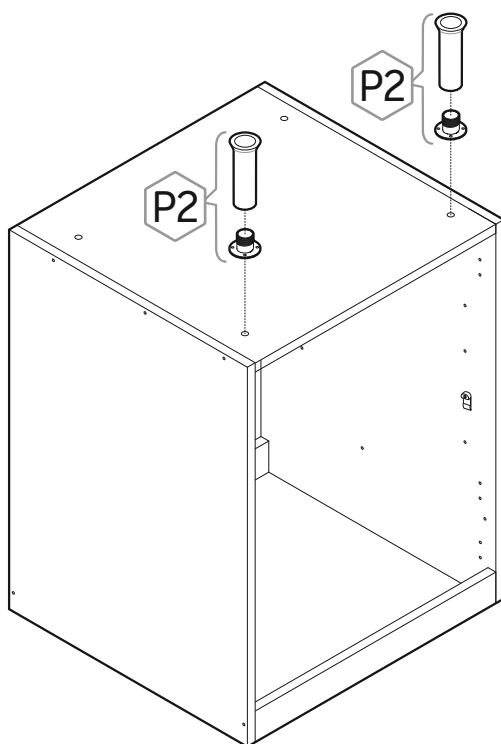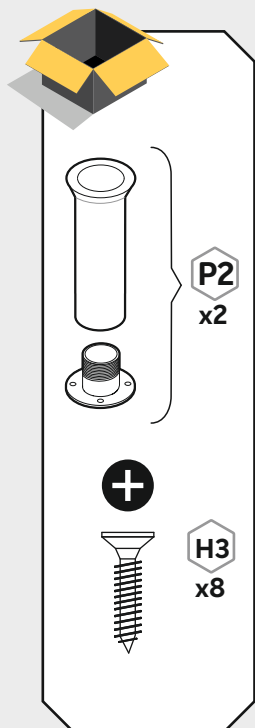

7

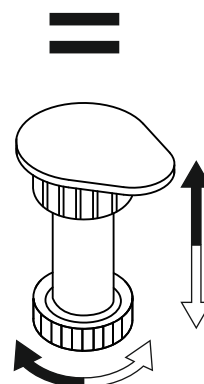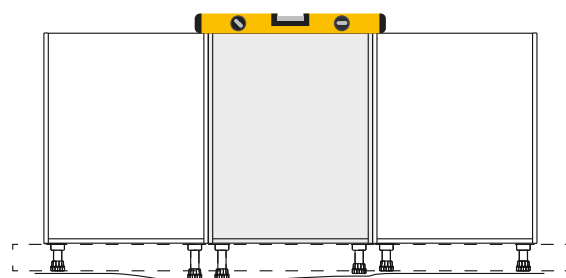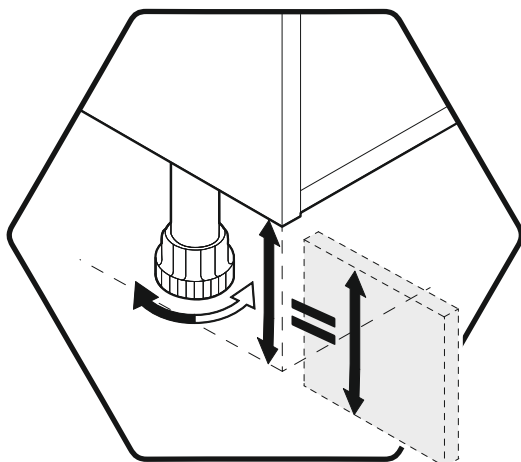

8






Nota/Note/Mot/Nota:

Extender regulación bisagra "M1" al máximo antes de montar.

Extend "M1" hinge adjustment to the maximum before mounting.

Prolongez le réglage de la charnière « M1 » au maximum avant le montage.

Estenda o ajuste da dobradiça "M1" ao máximo antes da montagem.

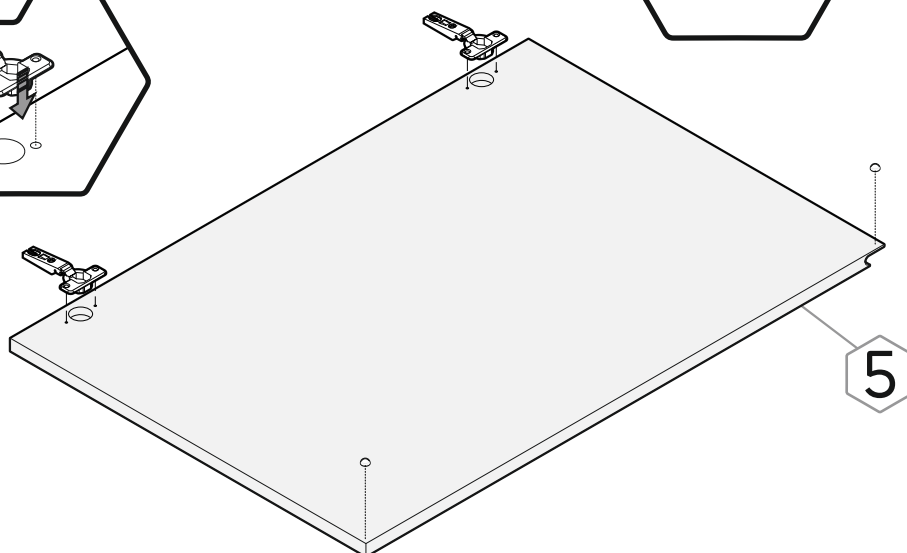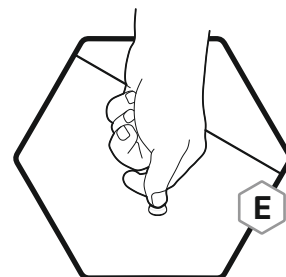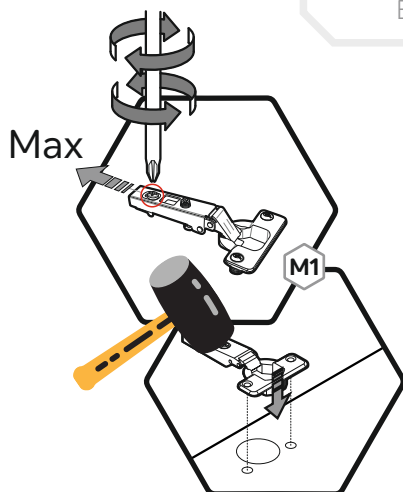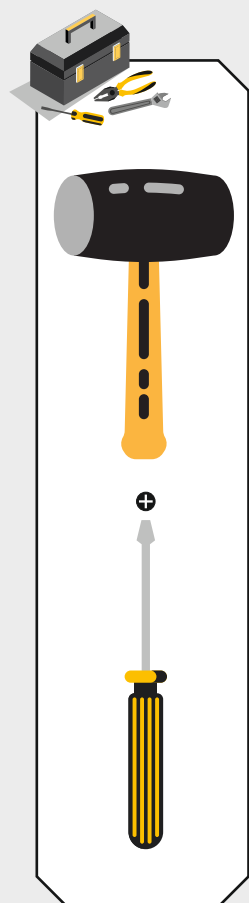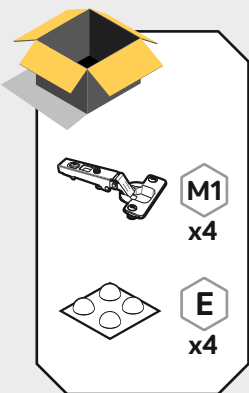

9




Nota/Note/Mot/Nota:

Extender regulación bisagra "M1" al máximo antes de montar.

Extend "M1" hinge adjustment to the maximum before mounting.

Prolongez le réglage de la charnière « M1 » au maximum avant le montage.

Estenda o ajuste da dobradiça "M1" ao máximo antes da montagem.

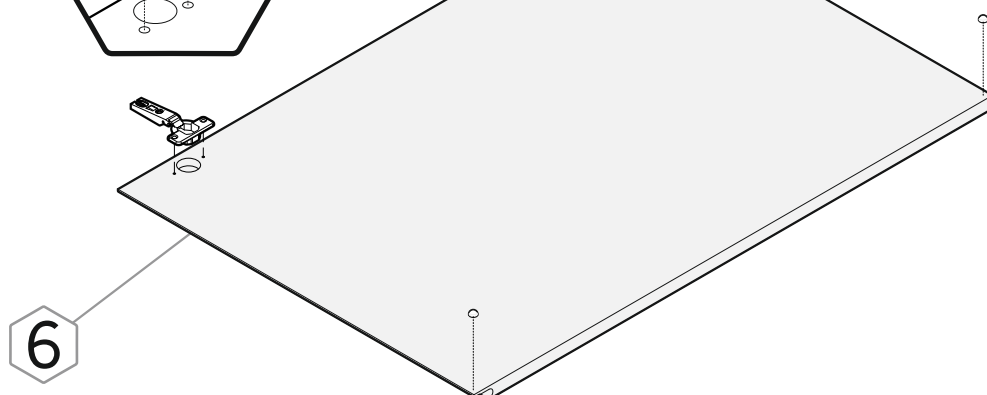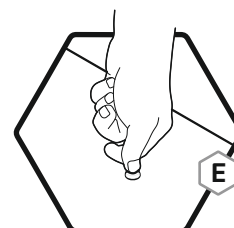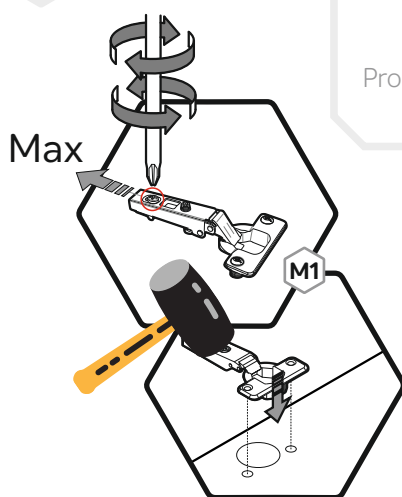

10

